

want to know more?

readymade curtains

freedom

Curtains are used to soften the look of a window. They can be also be used as side drapes, or be hung over a roller blind to further blackout light and provide insulation. Our range includes eyelet, concealed tab and tie top curtain styles in quality fabrics and colours.

What are the fabric options?

Our range offers sheer, lightfilter and blackout curtains

sheer

- Allows natural light to filter in
- Maintains daytime privacy
- Eliminates harsh sun glare
- Preserves external views

lightfilter

- Heavier fabric than a sheer
- Allows some natural light in
- Maintains daytime privacy
- Perfect layered with a blind

blackout

- Allows for maximum light control
- Provides insulation
- Provides maximum privacy
- Reduces noise

What size curtains are available?


There are two sizes offered in the readymade curtain range

- 140cm (width) x 230cm (drop)
- 180cm (width) x 250cm (drop)

NOTE: Curtains are packed individually. Not all curtains are available in both sizes.


What curtain styles are available?

Our range includes eyelet, concealed tab and tie top curtains.

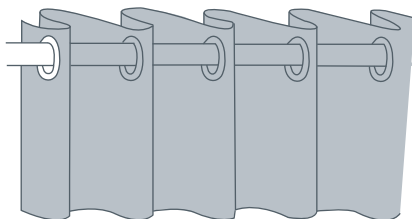


Eyelet

- Clean and neat finish
- Easy to hang
- Stainless steel eyelet rings for smooth gliding

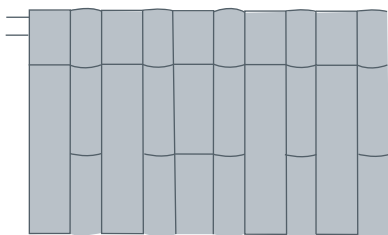

Concealed Tab

- Clean and neat finish
- Easy to hang
- Made with tabs at the back of the curtain to hang

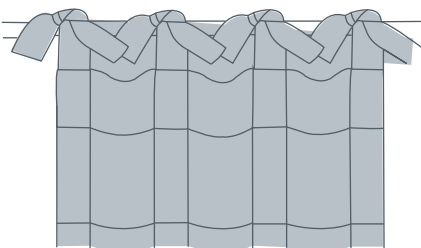

Tie Top

- A casual and classic style curtain
- Creates an informal and relaxed look
- Easy to hang, simply tie the tabs along the top of the curtain rod
- Curtains glide along the rod as the tie tabs form loops

want to know more?

readymade curtains




How to Measure

- Use a metal tape for accuracy. Make sure your tape measure is level.
- Specify all measurements in cm. Use exact measurements to one decimal point (e.g 158.5cm, do not round up or down to the nearest cm).
- If you do not have a rod already installed, decide the exact position of your rod, as **all measurements are taken from the rod and not the window.**
- Curtains should be mounted outside the window frame; either on the top window architrave or on the wall above the window.
- Measure every window as measurements may vary between windows.
- Do not take measurements from house plans.

Step 1 – Measure from the top of the rod to the desired finished curtain length. This measurement is the drop of your curtain.

Step 2 – To determine the width, measure the full width of the curtain rod. See below information on curtain panels.

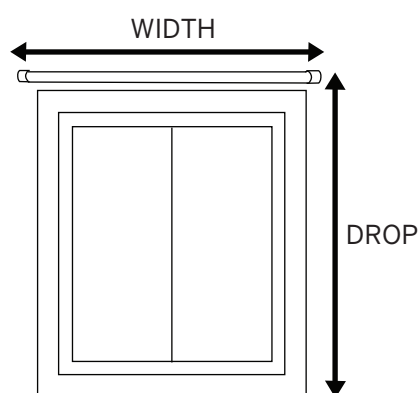

How many curtain panels will I need?

If you are using your curtains as side drapes, you will only require two curtain panels to hang either side of your window (one for each side). This will provide a decorative function.

The number of panels will be determined by the width of your window and the look you require to finish the window. Less panels will provide a more tailored look, whereas more panels will create a richer, more opulent appearance. Two panels will often suffice but for larger windows (above 210cm wide) use the below calculation method to determine how many you require.

Take the overall width of your rod and multiply by 1.5 for standard fullness. Then divide this number by the width of your curtain. This will give you the number of curtain panels required, round up or down depending on the look you want. Some examples:

190cm (rod width) x 1.5 = 285cm / 140cm (width of your curtain) = 2 panels

240cm (rod width) x 1.5 = 360cm / 140cm (width of your curtain) = 2.5, round up to 3 panels

240cm (rod width) x 1.5 = 360cm / 180cm (width of your curtain) = 2 panels

Stack back your curtains

To optimise the view, or allow as much light as possible into your room, you may choose to stack back your curtains off your window. This means when the curtains are open they hang against the wall and not the window. To do this, the rod must extend beyond the window. We recommend 30cm on each side (60cm total additional length).